
Thelin Hearth Products

How To Replace the Feed Motor in the Parlour & Gnome Pellet Stove

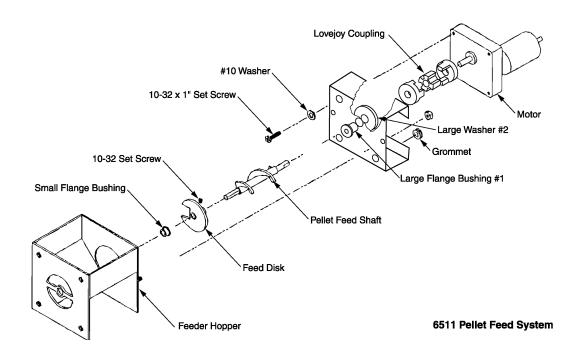

Step 1

CAUTION: Unplug power cord prior to performing any service on stove. Ensure stove has cooled down.

Locate Switch Panel on stove. When facing the front of the stove the Switch Panel is located on the right hand side.



Step 2

Remove (2) black 8-32 phillips pan head screws.



Step 3

Carefully lift Switch Panel out of Wrapper and unplug connector.



Step 4

Apply masking tape to Bottom Ring below the front of the Wrapper (both sides). This will protect the Bottom Ring from scratches while the Wrapper is removed.



Step 5

Apply masking tape to Bottom Ring below the front of the Wrapper (both sides). This will protect the Bottom Ring from scratches while the Wrapper is removed.



Step 6

Place a rag over the Exhaust Port in the back of the stove. This will protect the Wrapper when removing the Wrapper.



Step 7

Locate the (6) T30 Torx screws on the left and right hand side of the Wrapper.



Step 8

Locate the (6) T30 Torx screws on the left and right hand side of the Wrapper.



Step 9

Carefully remove all (6) T30 Torx screws with a T30 driver.

*Note: when replacing the Wrapper, the stainless steel washer goes between the screw head and the Wrapper. The mica washer goes between the Wrapper and the stove.




Step 10

Carefully remove the Wrapper from the stove.



Step 11

Locate the (4) 8-32 black philips pan head screws on Rear Inspection Cover.

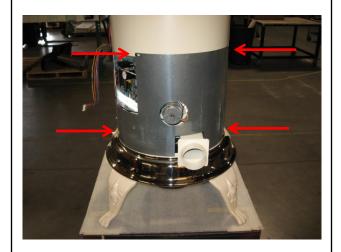

Step 12

Remove top (2) 8-32 black philips pan head screws from Rear Inspection Cover.



Step 13

Loosen, but do not remove, the bottom (2) 8-32 black philips pan head screws on the Rear Inspection Cover.



Step 14

Remove Rear Inspection Cover.



Step 15

Locate the Feed Motor assembly.



Step 16

Clip zip tie holding wires together.



Step 17

Unplug Feed Motor wire from wiring harness.




Step 18

Remove (2) 10-32 hex nuts holding Feed Motor assembly to stove using a 3/8" socket with 6" extension.



Step 19

Remove Feed Motor assembly from stove.

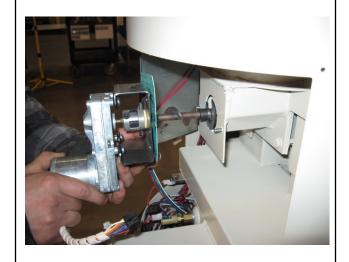

Step 20

Dab tip of auger shaft with high temperature grease before reinstalling new Feed Motor.



Step 21

Install new Feed Motor into stove.

Ensure gasket is between Feed Motor assembly and Feed Bucket.

Reassemble stove in reverse order of disassembly.

