


Theelin Hearth Products

# How To Replace the Resistor in the Parlour & Gnome Pellet Stove

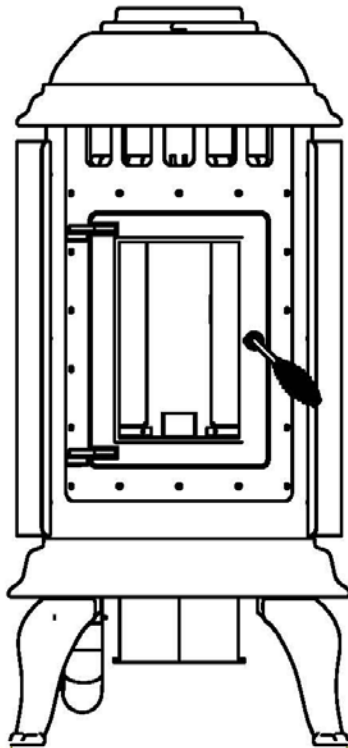

# How to Replace the Resistor in the Parlour & Gnome Pellet Stove

## Step 1

**CAUTION: Unplug power cord prior to performing any service on stove. Ensure stove has cooled down.**

Locate Switch Panel on stove. When facing the front of the stove the Switch Panel is located on the right hand side.




## Step 2

Remove (2) black 8-32 phillips pan head screws.



## Step 3

Carefully lift Switch Panel out of Wrapper and unplug connector.

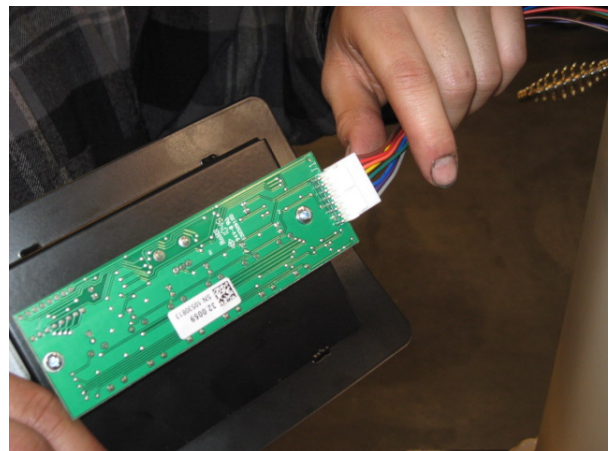

## How to Replace the Resistor in the Parlour & Gnome Pellet Stove

### Step 4

Apply masking tape to Bottom Ring below the front of the Wrapper (both sides). This will protect the Bottom Ring from scratches while the Wrapper is removed.



### Step 5

Apply masking tape to Bottom Ring below the front of the Wrapper (both sides). This will protect the Bottom Ring from scratches while the Wrapper is removed.



### Step 6


Place a rag over the Exhaust Port in the back of the stove. This will protect the Wrapper when removing the Wrapper.



## How to Replace the Resistor in the Parlour & Gnome Pellet Stove

### Step 7

Locate the (6) T30 Torx screws on the left and right hand side of the Wrapper.

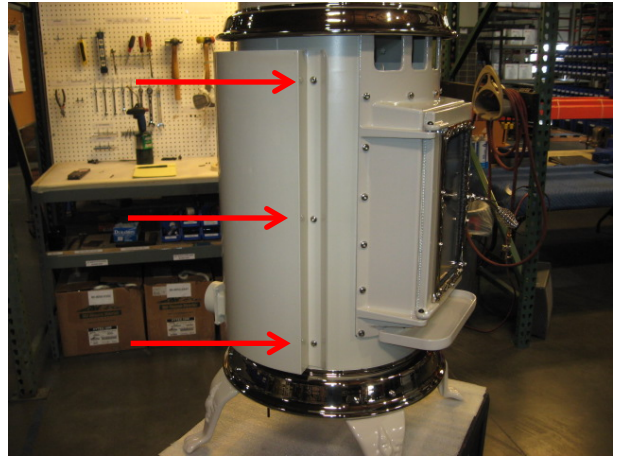

### Step 8

Locate the (6) T30 Torx screws on the left and right hand side of the Wrapper.



### Step 9

Carefully remove all (6) T30 Torx screws with a T30 driver.

\*Note: when replacing the Wrapper, the stainless steel washer goes between the screw head and the Wrapper. The mica washer goes between the Wrapper and the stove.





## How to Replace the Resistor in the Parlour & Gnome Pellet Stove


### Step 10

Carefully remove the Wrapper from the stove.




### Step 11

Locate the (4) 8-32 black philips pan head screws on Rear Inspection Cover.

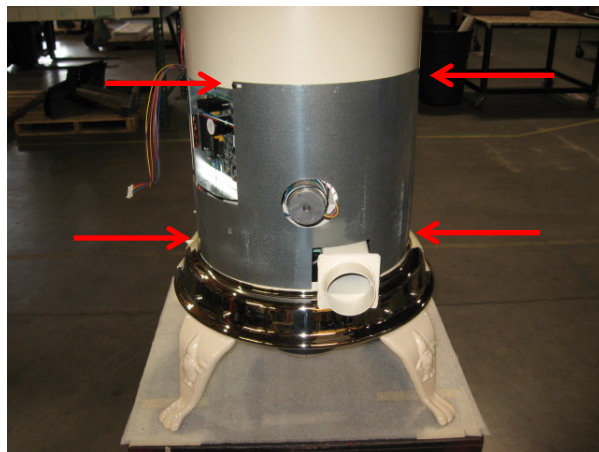

### Step 12


Remove top (2) 8-32 black philips pan head screws from Rear Inspection Cover.

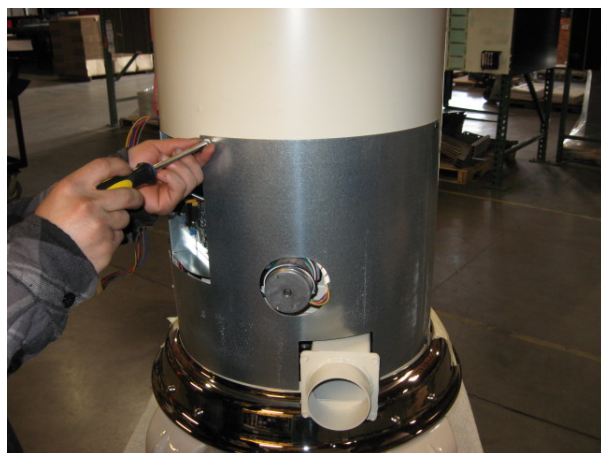

## How to Replace the Resistor in the Parlour & Gnome Pellet Stove

### Step 13

Loosen, but do not remove, the bottom (2) 8-32 black philips pan head screws on the Rear Inspection Cover.

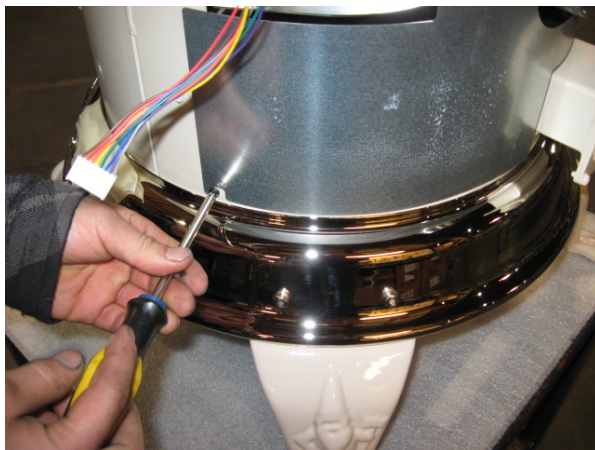


### Step 14

Remove Rear Inspection Cover.



### Step 15


Locate the Resistor.

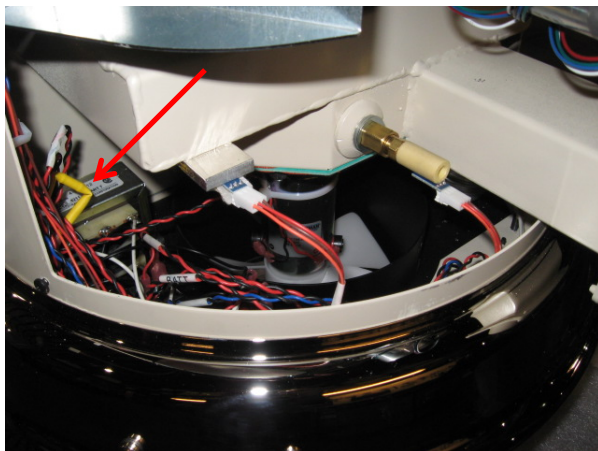

## How to Replace the Resistor in the Parlour & Gnome Pellet Stove

### Step 16

Pull out Resistor and unplug from the wiring harness.

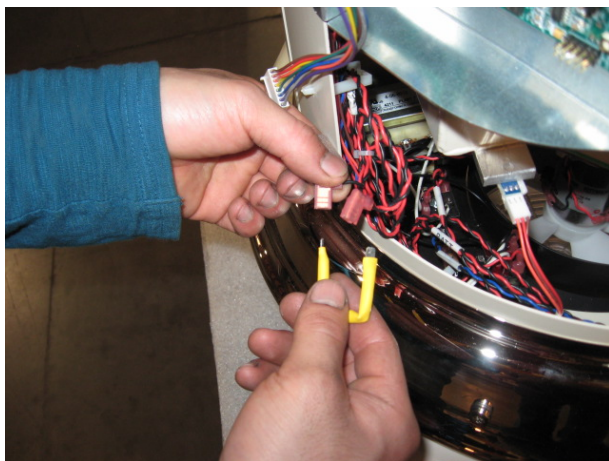

### Step 17

Plug in new Resistor.

Reassembly is reverse of removal.

